

Universal Electronics/Innovative Systems

Potenza ST Backlit Remote



Programming

Quick Setup STB Codes

- Hold SETUP plus the corresponding digit key, until the STB device key blinks twice:
 - Digit 1 - Legacy Amino Global
 - Digit 2 - Legacy Amino IR Band 1
 - Digit 3 - Legacy Amino IR Band 2
 - Digit 4 - Legacy Amino IR Band 3
 - Digit 5 - Legacy Amino IR Band 4
 - Digit 6 - ADB
 - Digit 7 - Entone/Amino

Manual Code Entry

- Hold SETUP until the STB key blinks twice. Enter the four-digit code. Verify that the STB key blinks twice to confirm the code is stored.
 - Legacy Amino - 1 8 9 8
 - ADB - 2 2 5 4
 - IS-5112W (uses Motorola code) - 1 3 7 6
 - Entone/Amino - 4 4 3 7

UEI Simple Set Device Codes

- These codes are used to quickly program the TV, AUD, DVD, and VCR device keys for popular brands
 - Hold SETUP until the device key blinks.
 - Press the device key you wish to program. The device key should stay lit.
 - Point the remote at your device. Press and hold the digit corresponding to the device brand, until the device turns on/off. (Usually happens very quickly)
 - The remote should now be programmed for your device.

TV		DVD/VCR		Audio	
DIGIT	BRAND	DIGIT	BRAND	DIGIT	BRAND
1	Insignia	1	Insignia	1	Bose
2	LG	2	LG	2	Denon
3	Panasonic	3	Panasonic	3	LG
4	Philips/Magnavox	4	Philips, Magnavox	4	Onkyo
5	Samsung	5	RCA	5	Panasonic
6	Sanyo	6	Samsung	6	Philips
7	Sharp	7	Sharp	7	Pioneer
8	Sony	8	Sony	8	Samsung
9	Vizio	9	Toshiba	9	Sony
0	Westinghous	0	VIZIO	0	Yamaha

Master Power

- Hold SETUP until the device key blinks twice
- Enter 9 9 5
- Press POWER
- Press the device keys you want to include in the Master Power programming.
- Hold SETUP until the device key blinks twice

Unlock STB Key

- Hold SETUP until the STB key blinks twice
- Enter 9 8 2
- STB key will blink four times (unlocked)
- STB key can now be programmed

Unlock AUD, DVD, and VCR Keys

- Hold SETUP until the device key blinks twice
- Enter 9 9 2
- Press the device key twice
- The device key should blink twice. It can now be programmed.

Example: To unlock the DVD device key, press [SETUP] > 9 9 2 > DVD > DVD.

Current Programming

This will show you what code is currently programmed on the remote.

- Press and hold the Setup key until the STB key blinks twice
- Enter 9 9 0
- STB key will blink twice
- Press 1 and count the blinks = 1st number in the code
- Press 2 and count the blinks = 2nd
- Press 3 and count the blinks = 3rd
- Press 4 and count the blinks = 4th
- Put the numbers together and you have the 4-digit code